



LOAD LOWERING SYSTEM
WILLIAM RICHEY AND JOHN BOLDING
10/816,243
XHAT 101

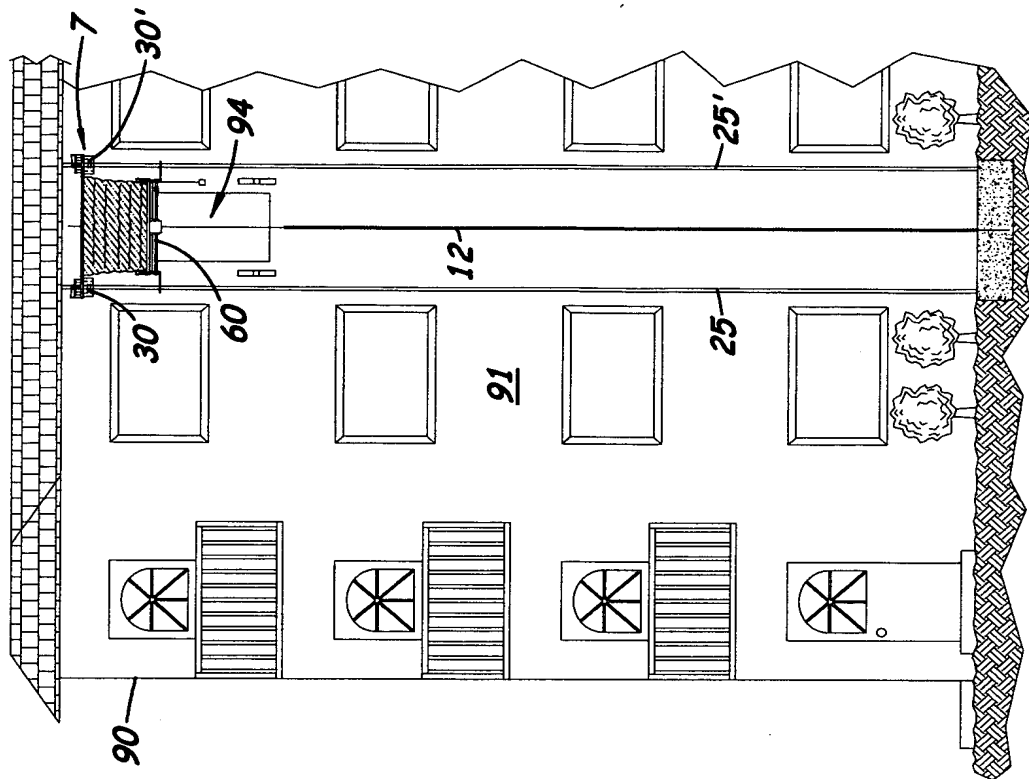


Fig. 1B

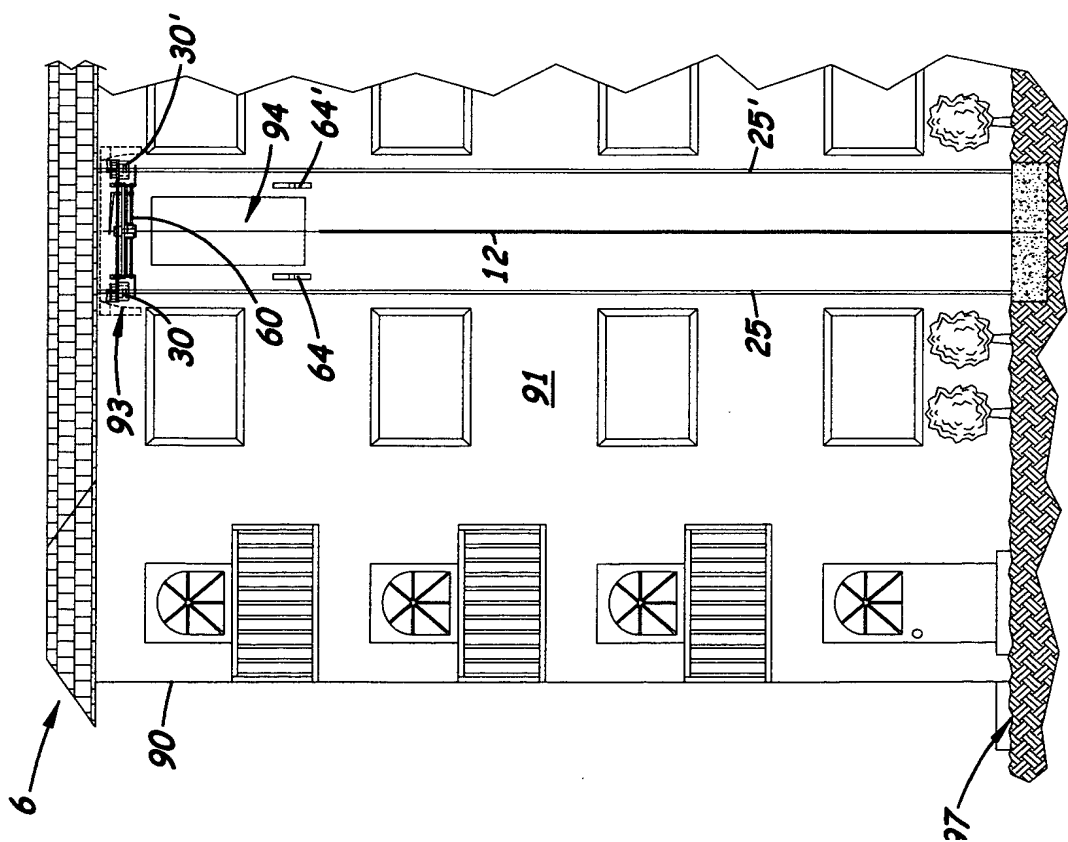


Fig. 1A

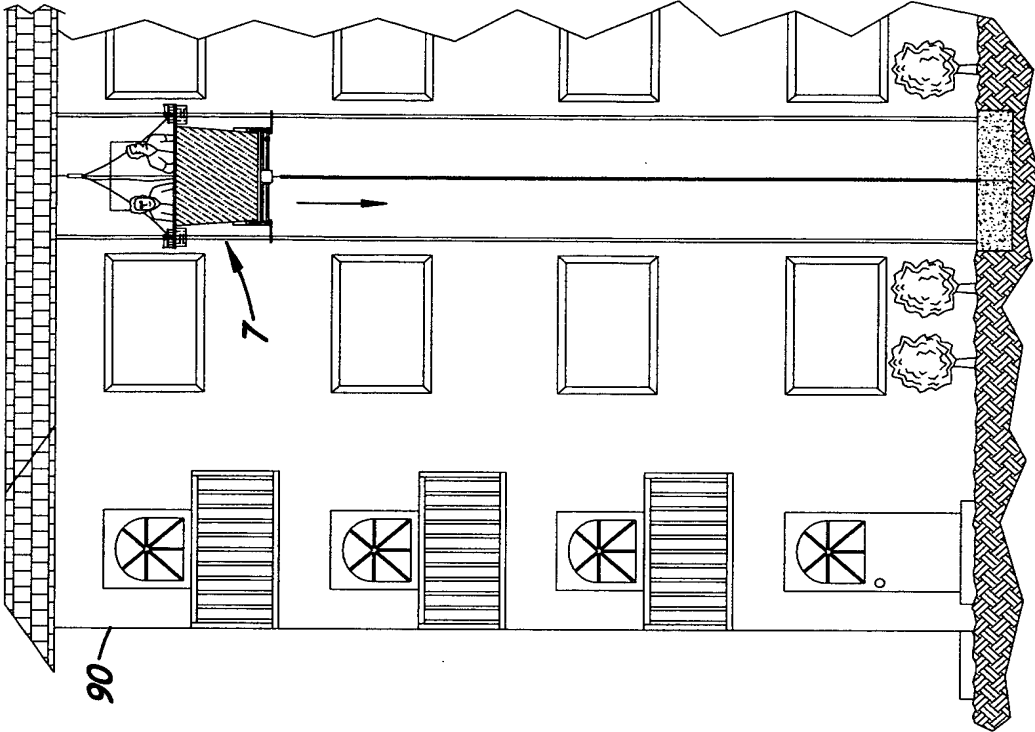


Fig. 1D



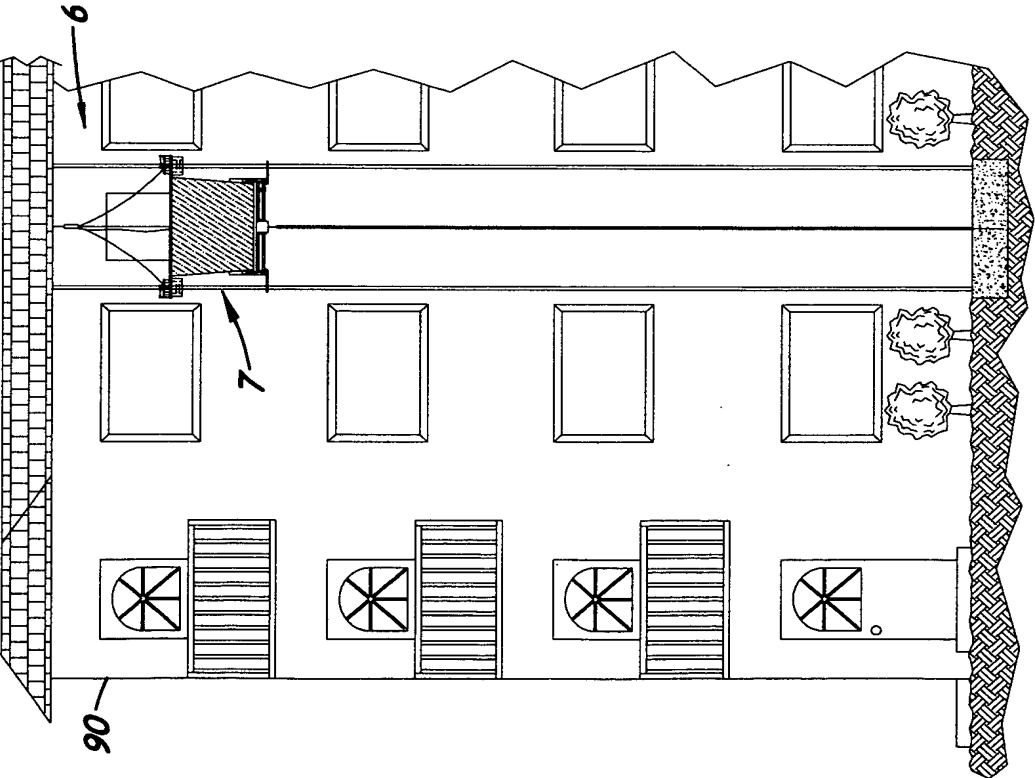


Fig. 1C

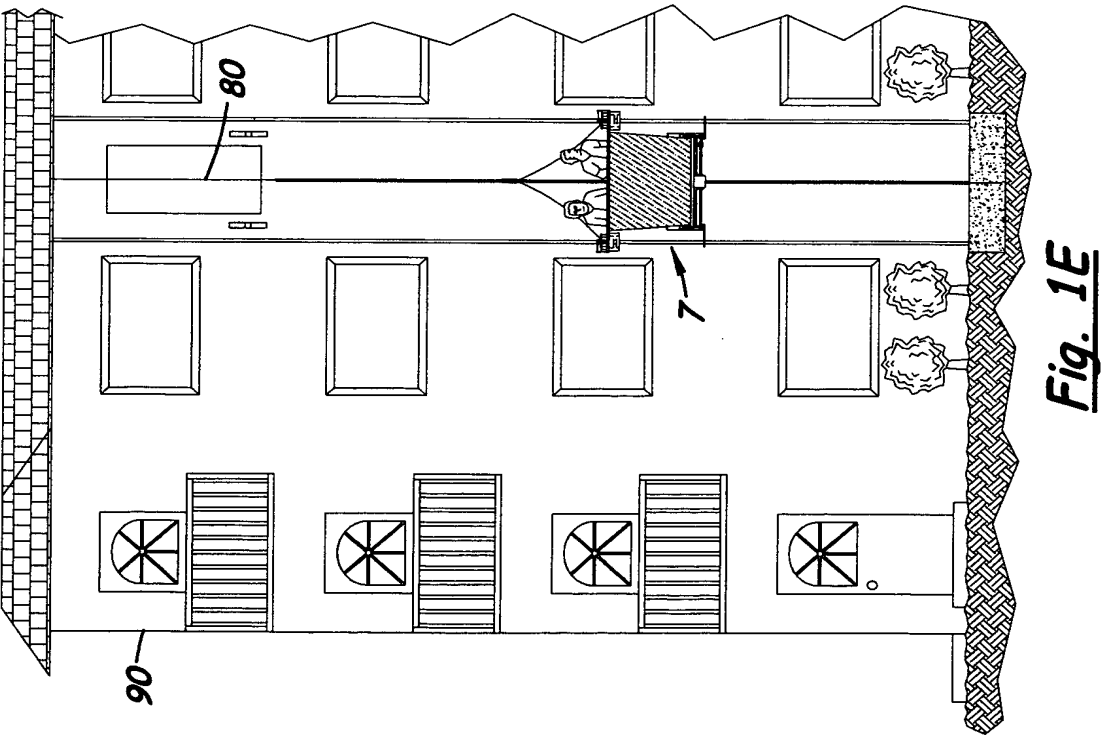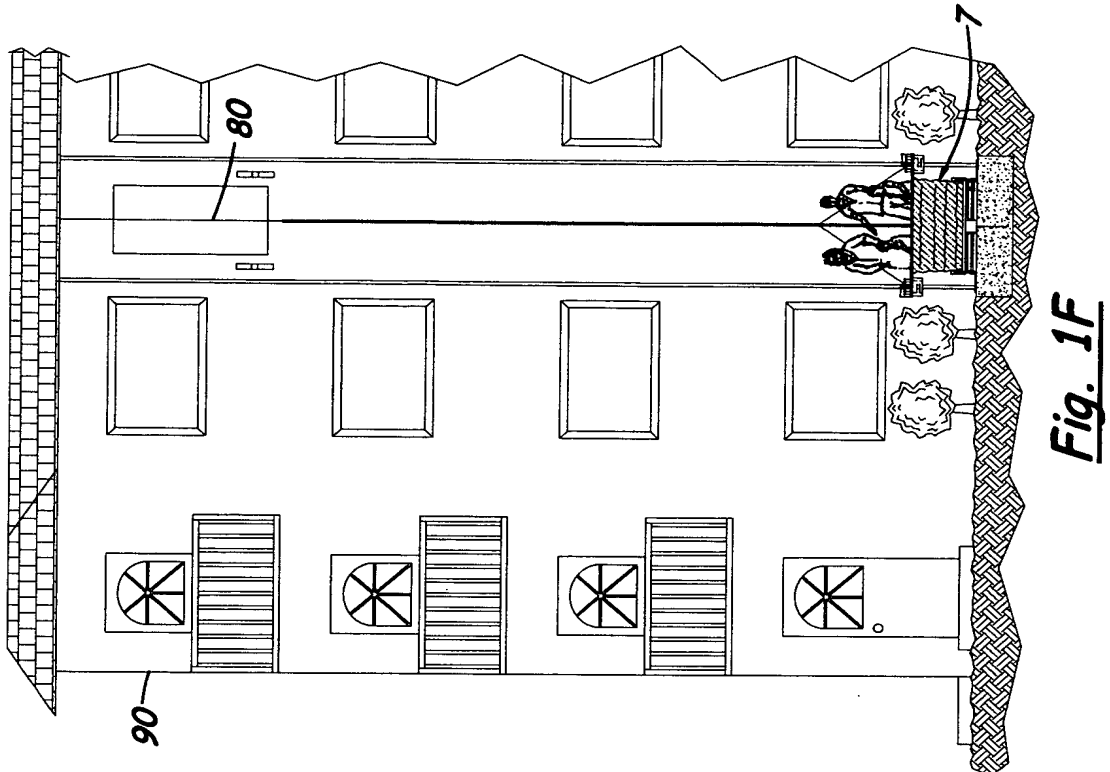

LOAD LOWERING SYSTEM
WILLIAM RICHEY AND JOHN BOLDING
10/816,243
XHAT 101

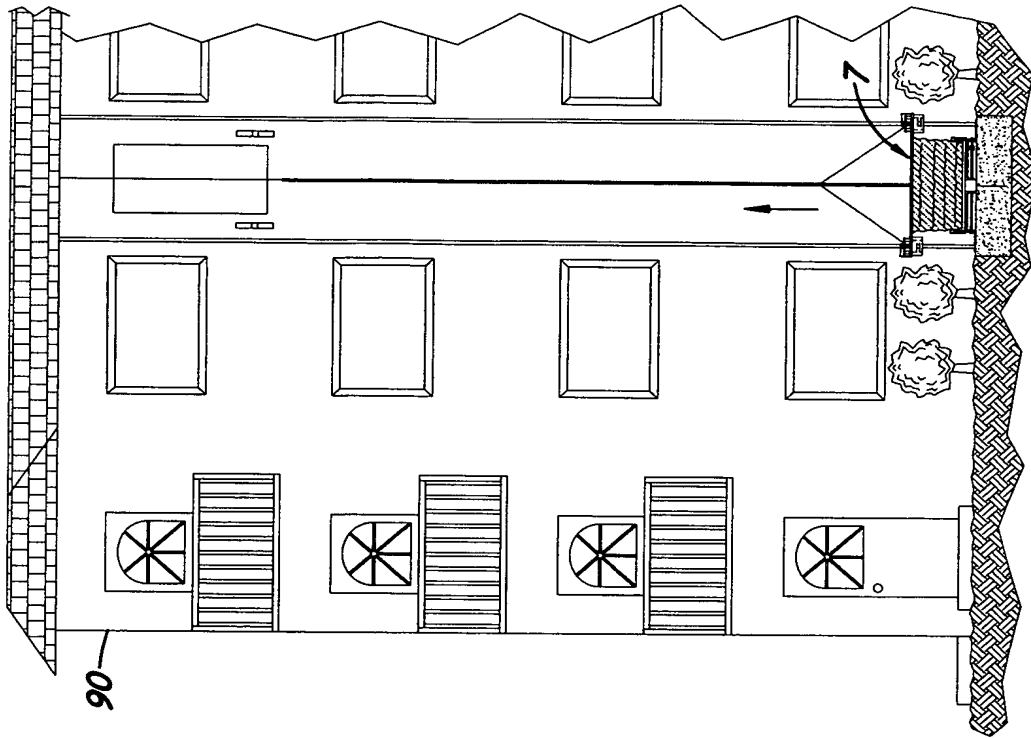


Fig. 1H



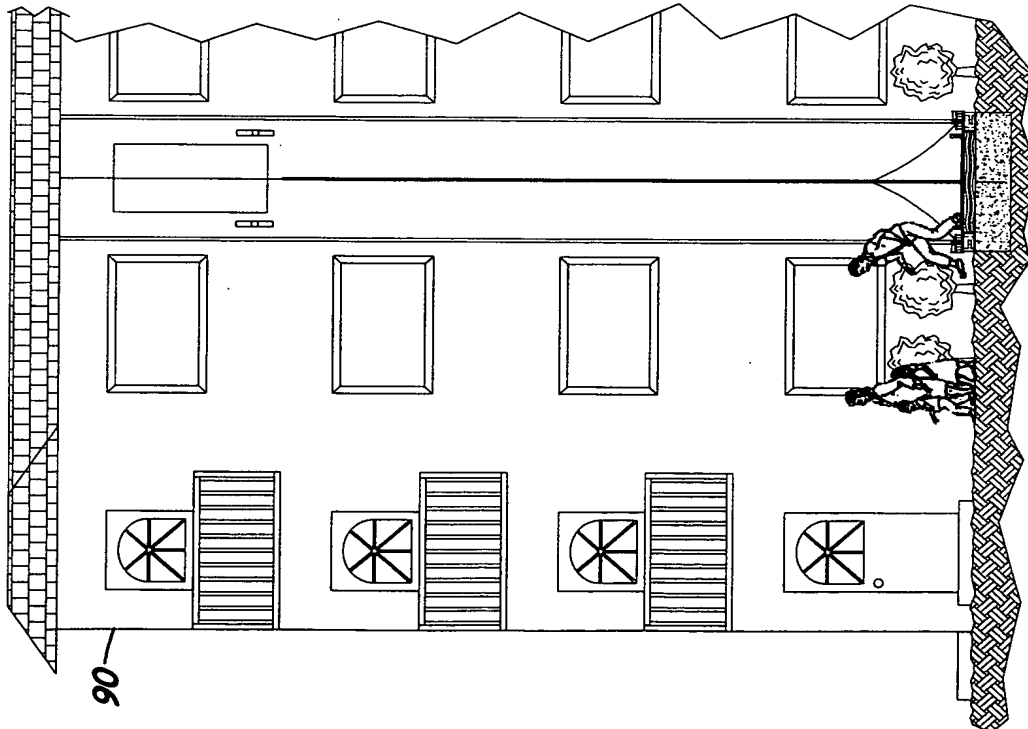


Fig. 1G

LOAD LOWERING SYSTEM
WILLIAM RICHEY AND JOHN BOLDING
10/816,243
XHAT 101

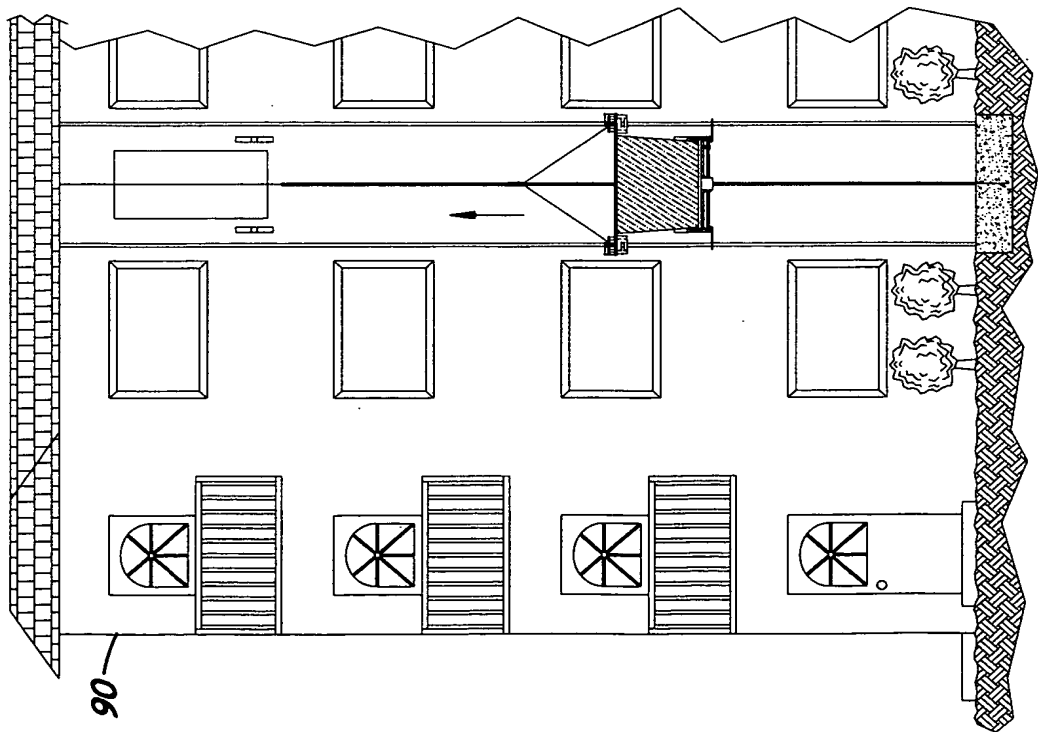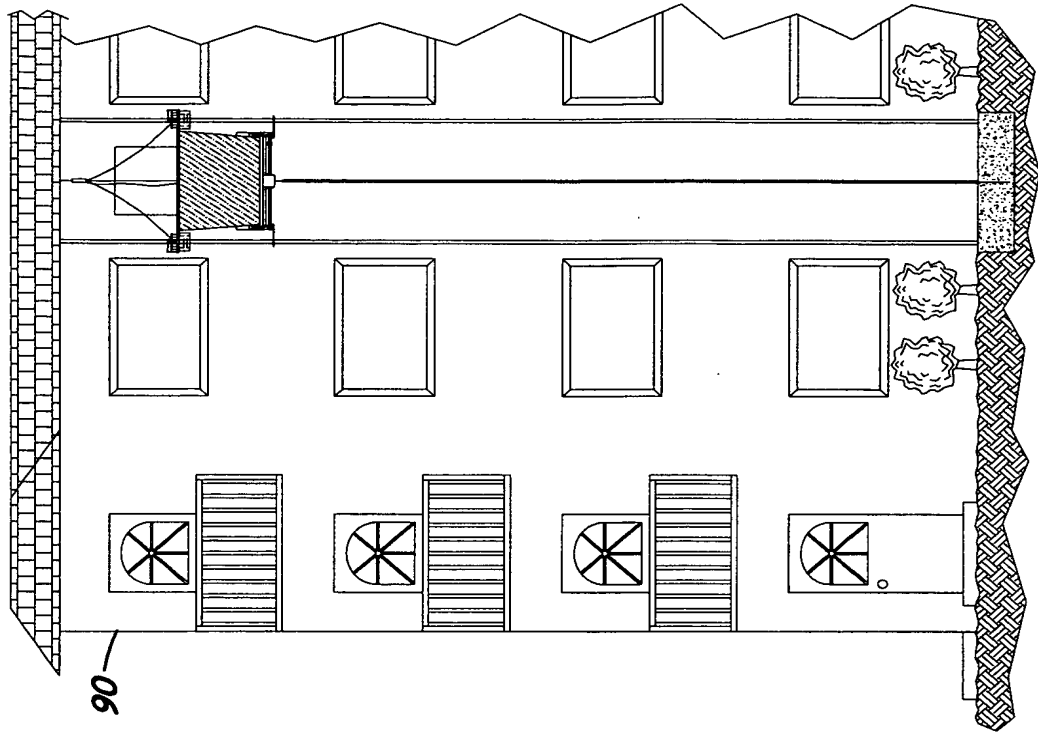

LOAD LOWERING SYSTEM
WILLIAM RICHEY AND JOHN BOLDING
10/816,243
XHAT 101

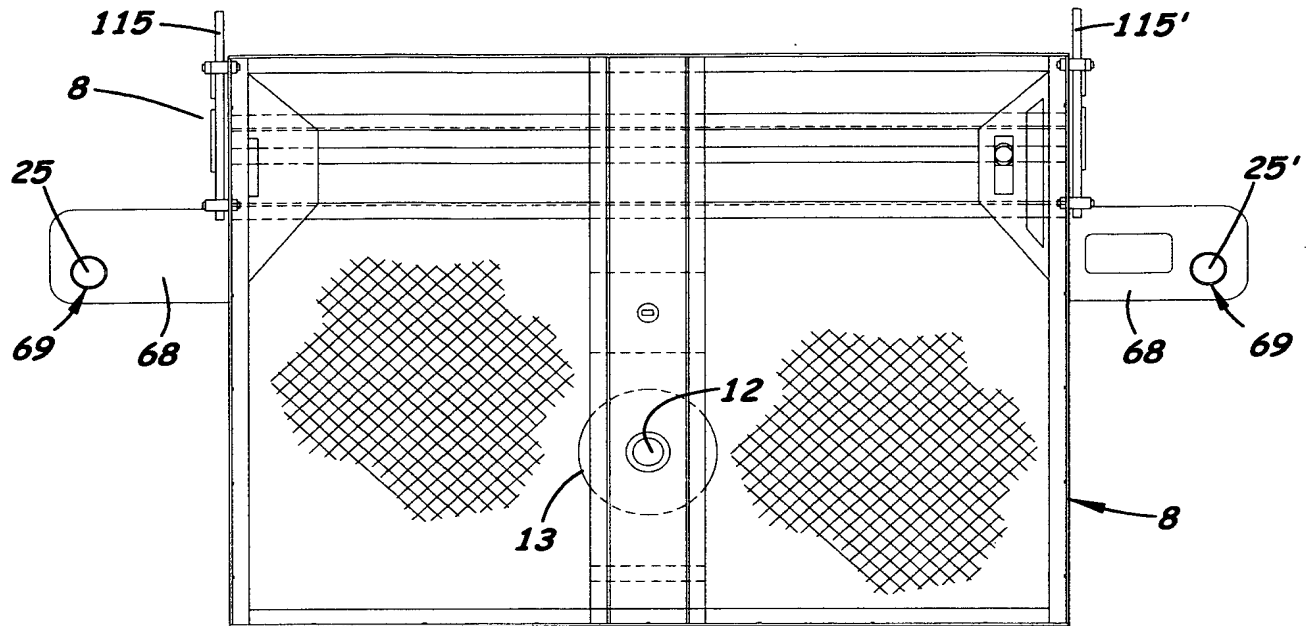


Fig. 2

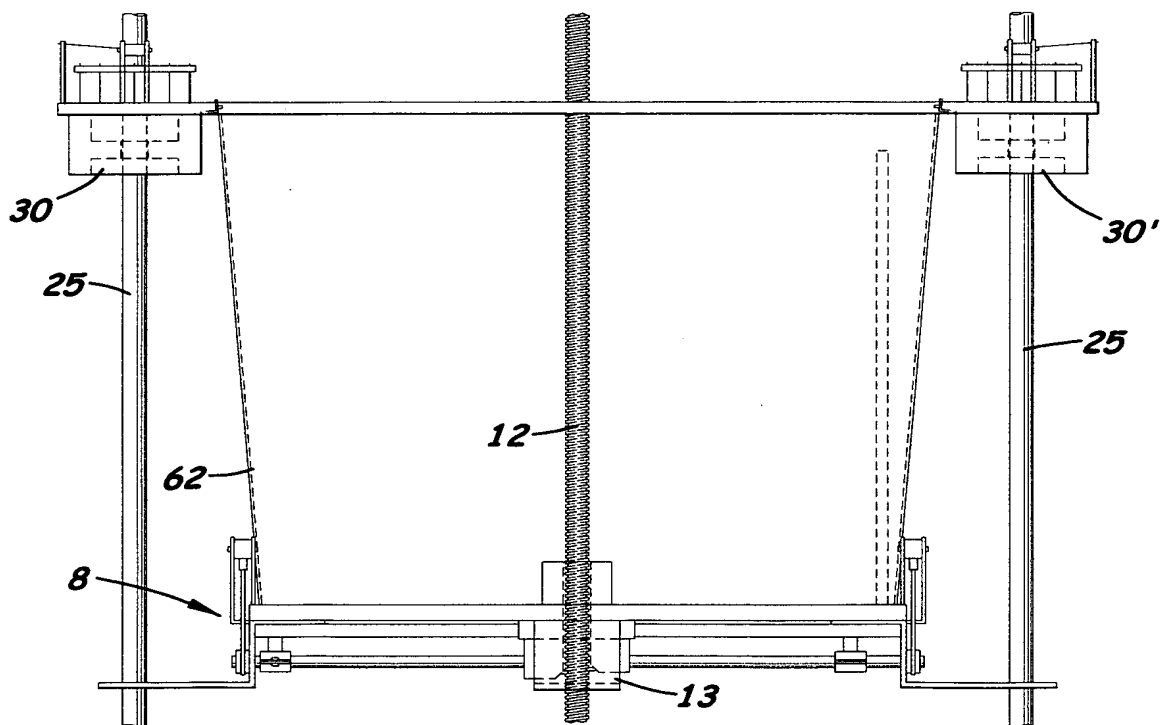


Fig. 3

LOAD LOWERING SYSTEM
WILLIAM RICHEY AND JOHN BOLDING
10/816,243
XHAT 101

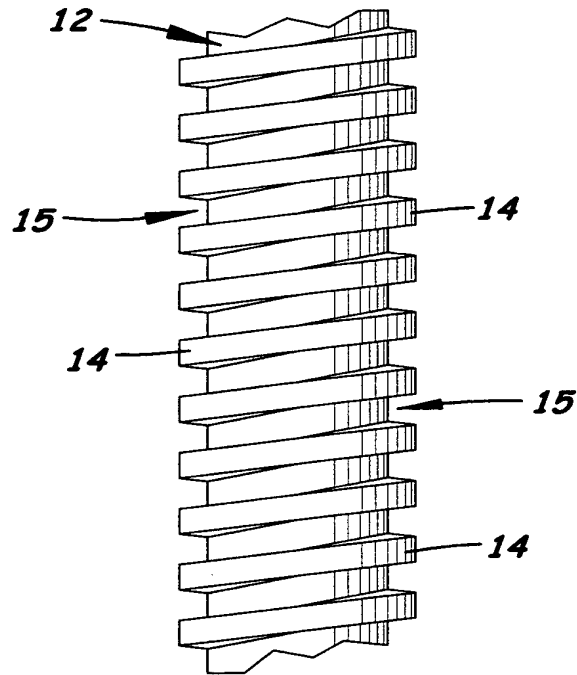


Fig. 4

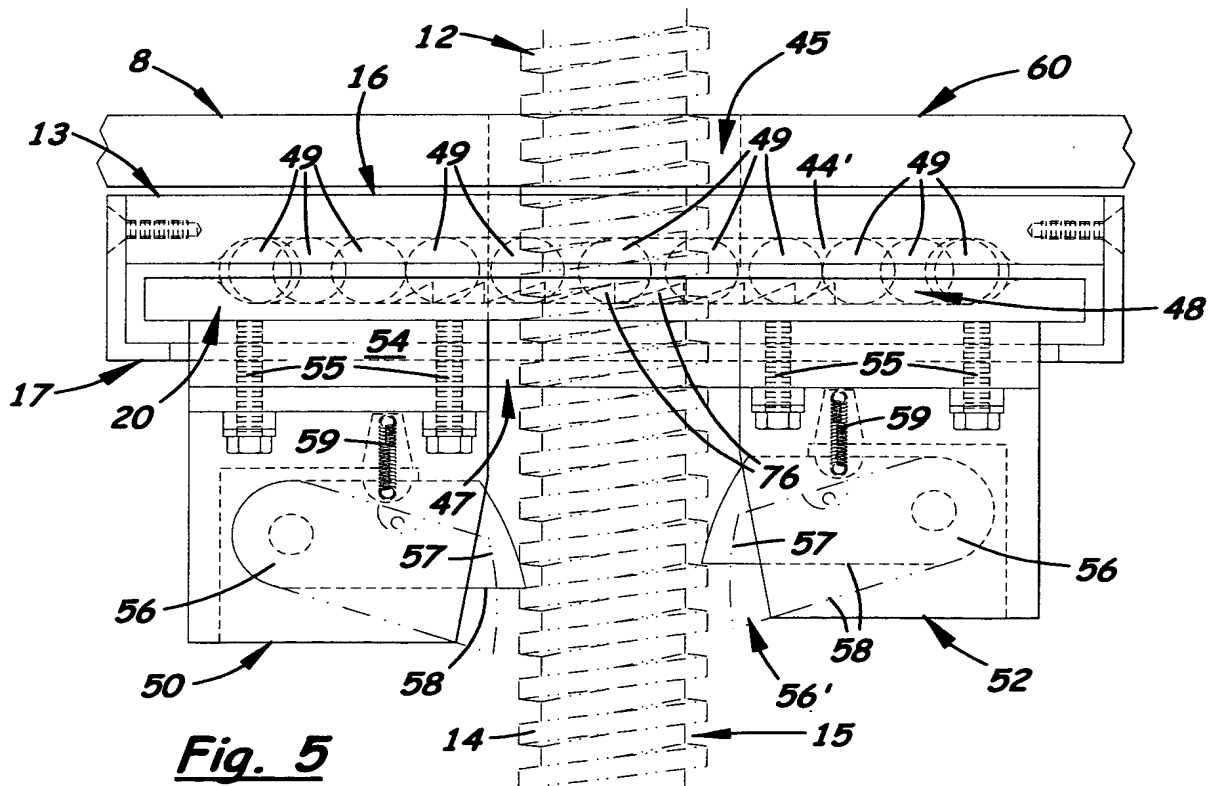


Fig. 5

LOAD LOWERING SYSTEM
WILLIAM RICHEY AND JOHN BOLDING
10/816,243
XHAT 101

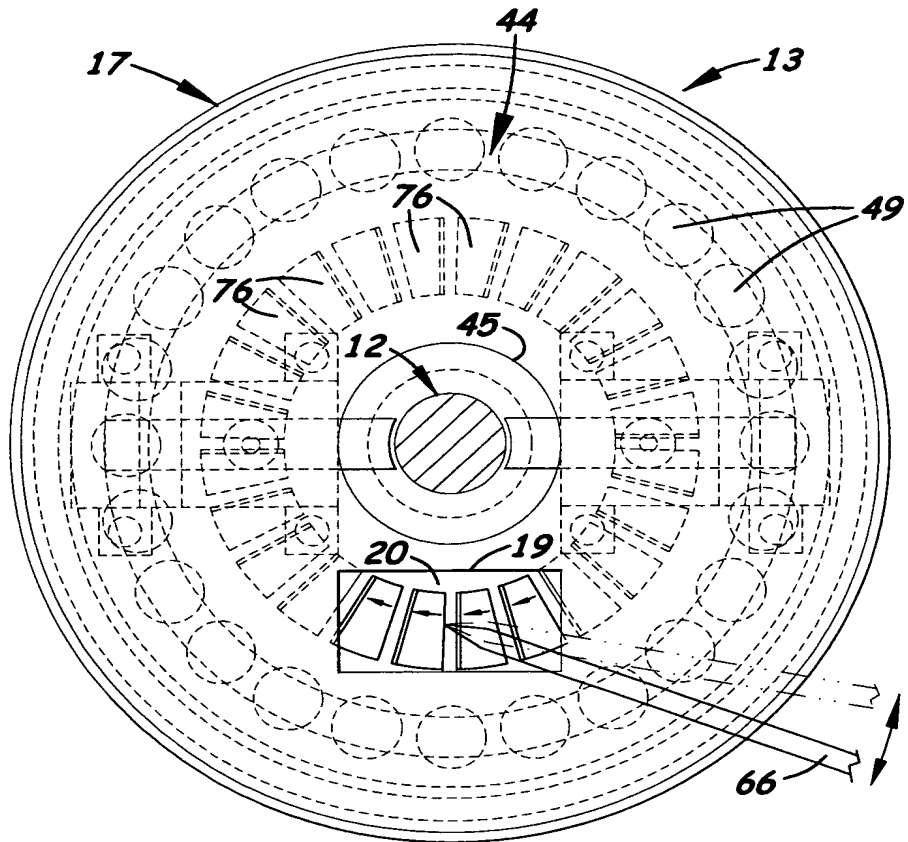


Fig. 6

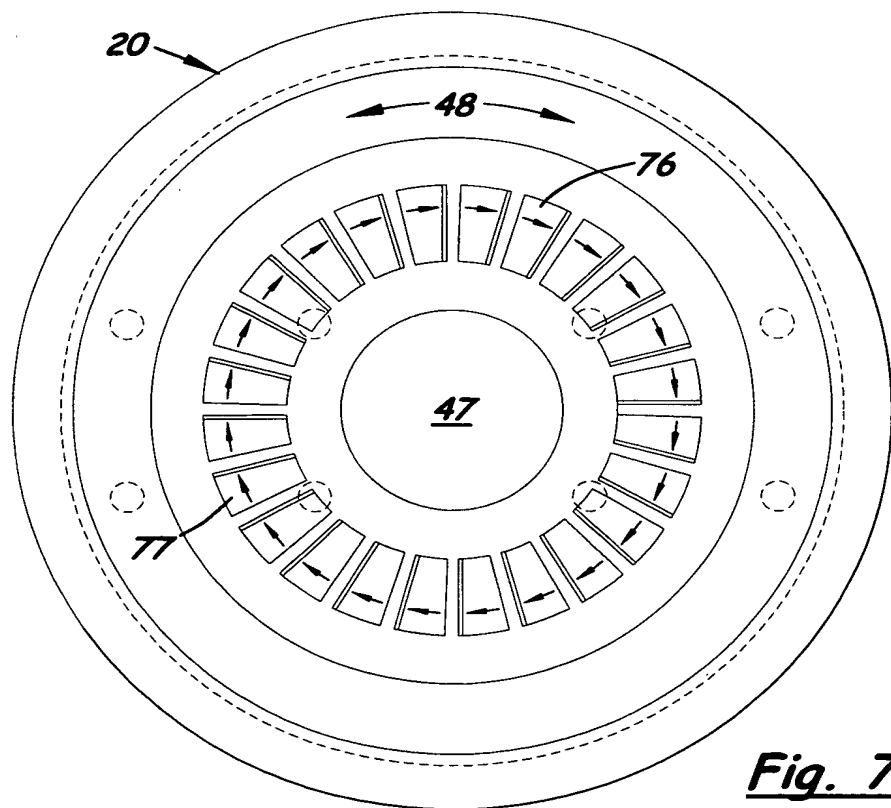


Fig. 7




Fig. 8

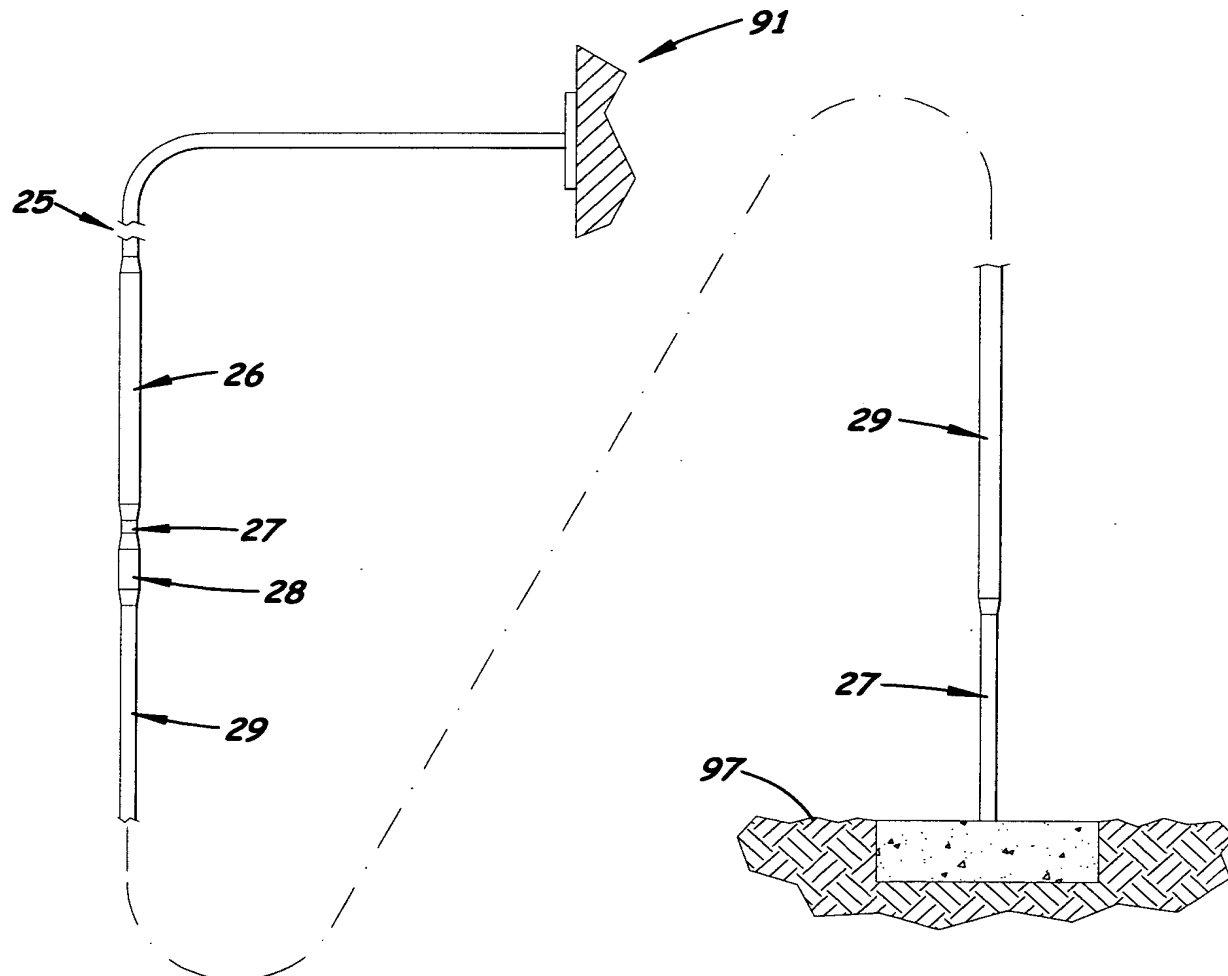


Fig. 9

LOAD LOWERING SYSTEM
WILLIAM RICHEY AND JOHN BOLDING
10/816,243
XHAT 101

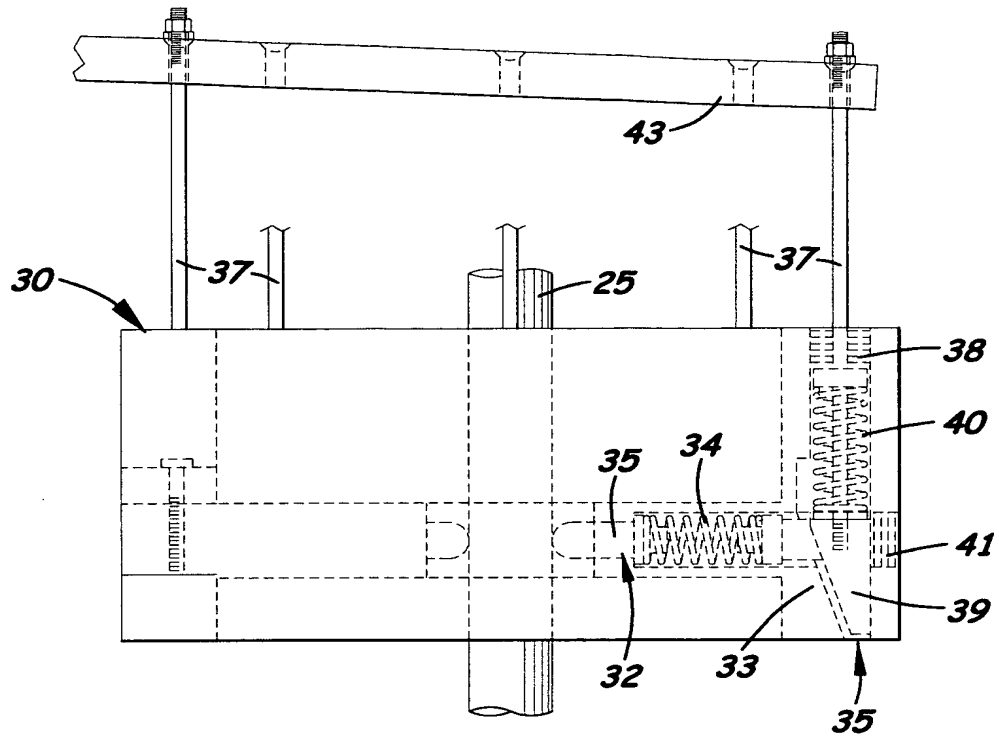


Fig. 10

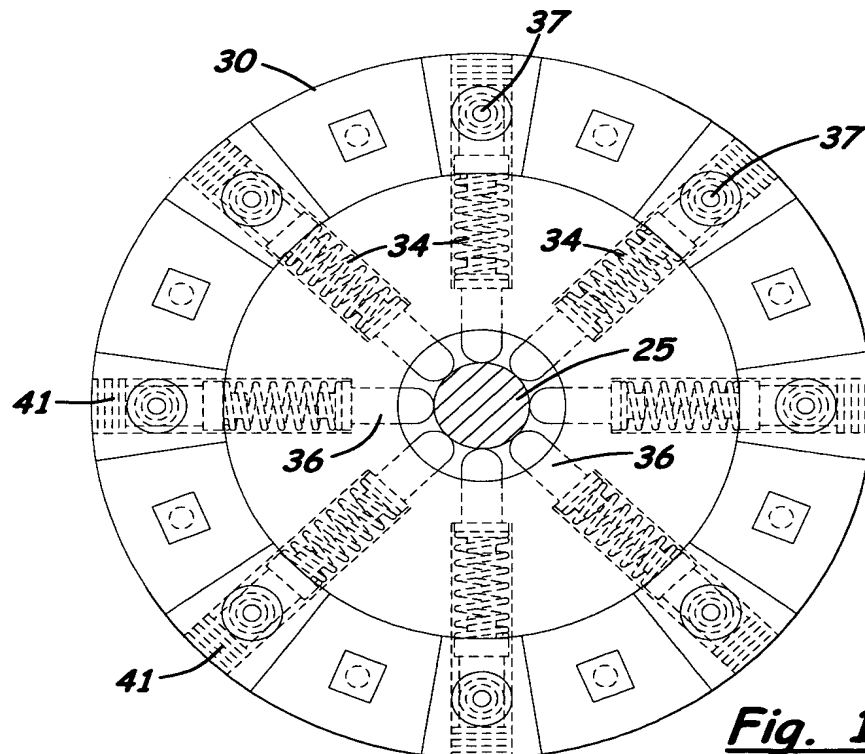


Fig. 11

LOAD LOWERING SYSTEM
WILLIAM RICHEY AND JOHN BOLDING
10/816,243
XHAT 101

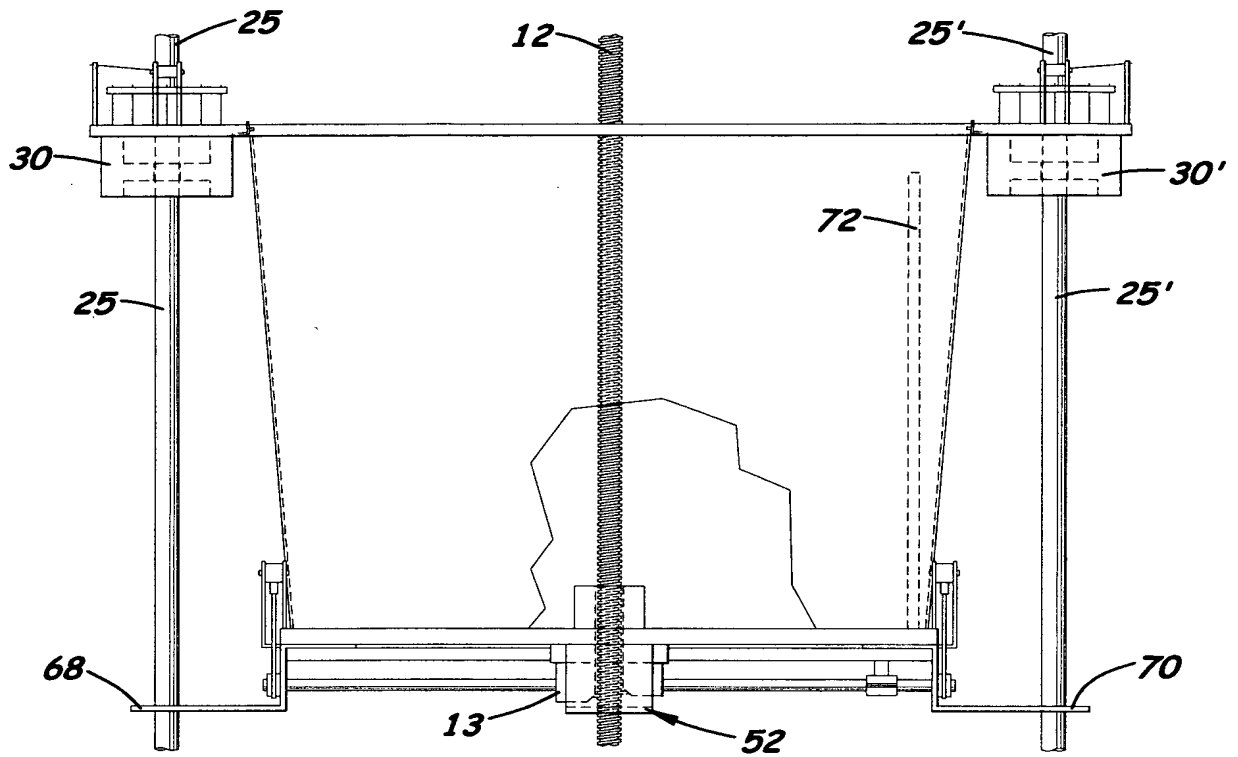


Fig. 12

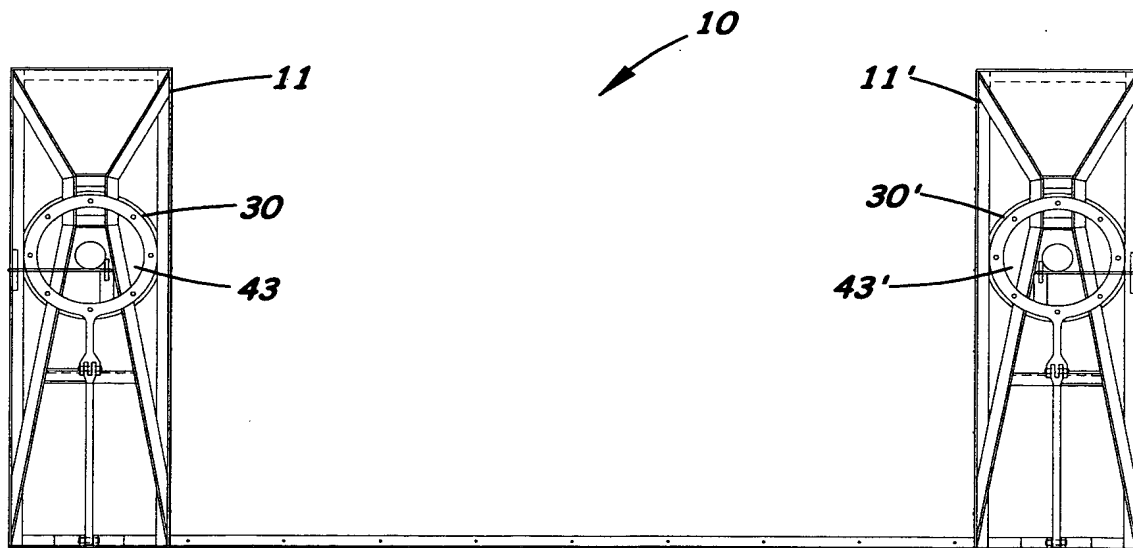


Fig. 13

LOAD LOWERING SYSTEM
WILLIAM RICHEY AND JOHN BOLDING
10/816,243
XHAT 101

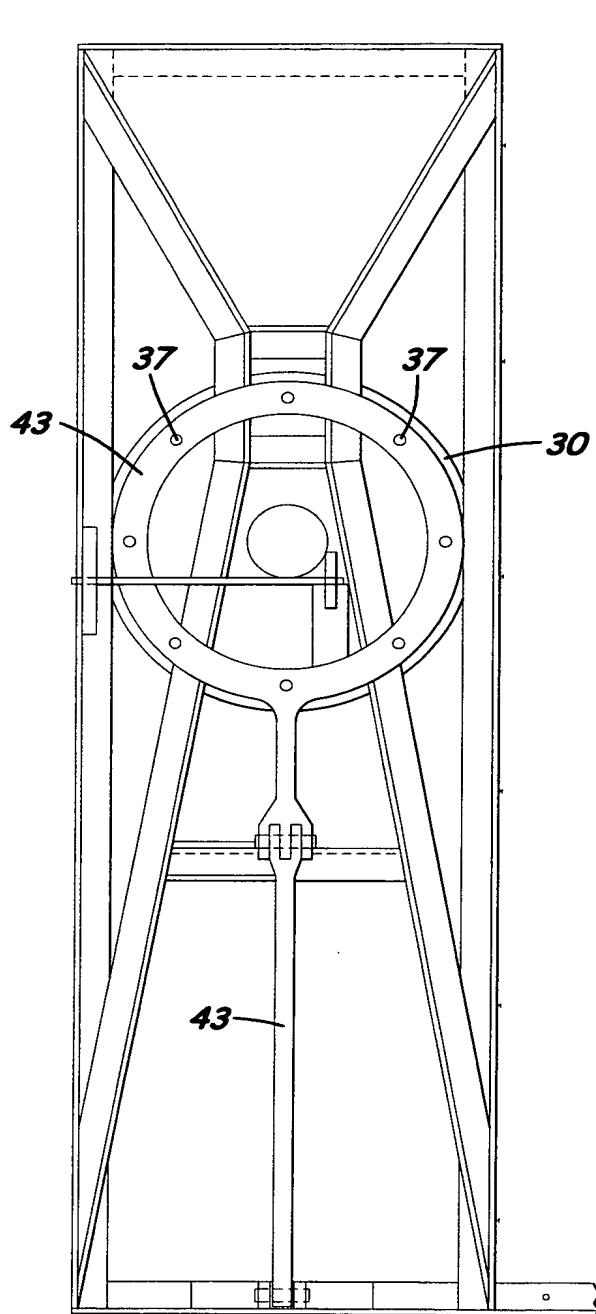


Fig. 14

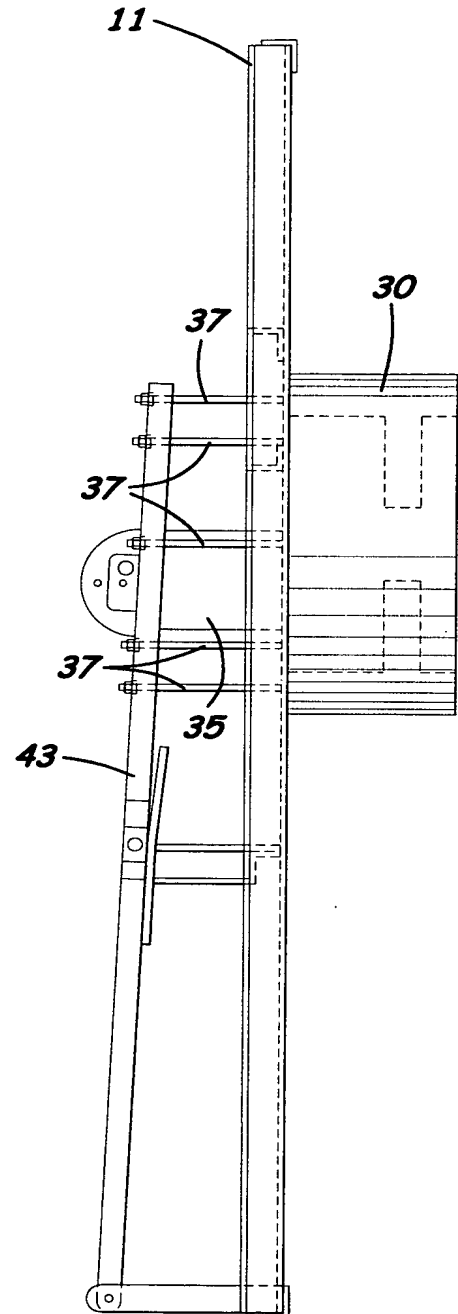


Fig. 15

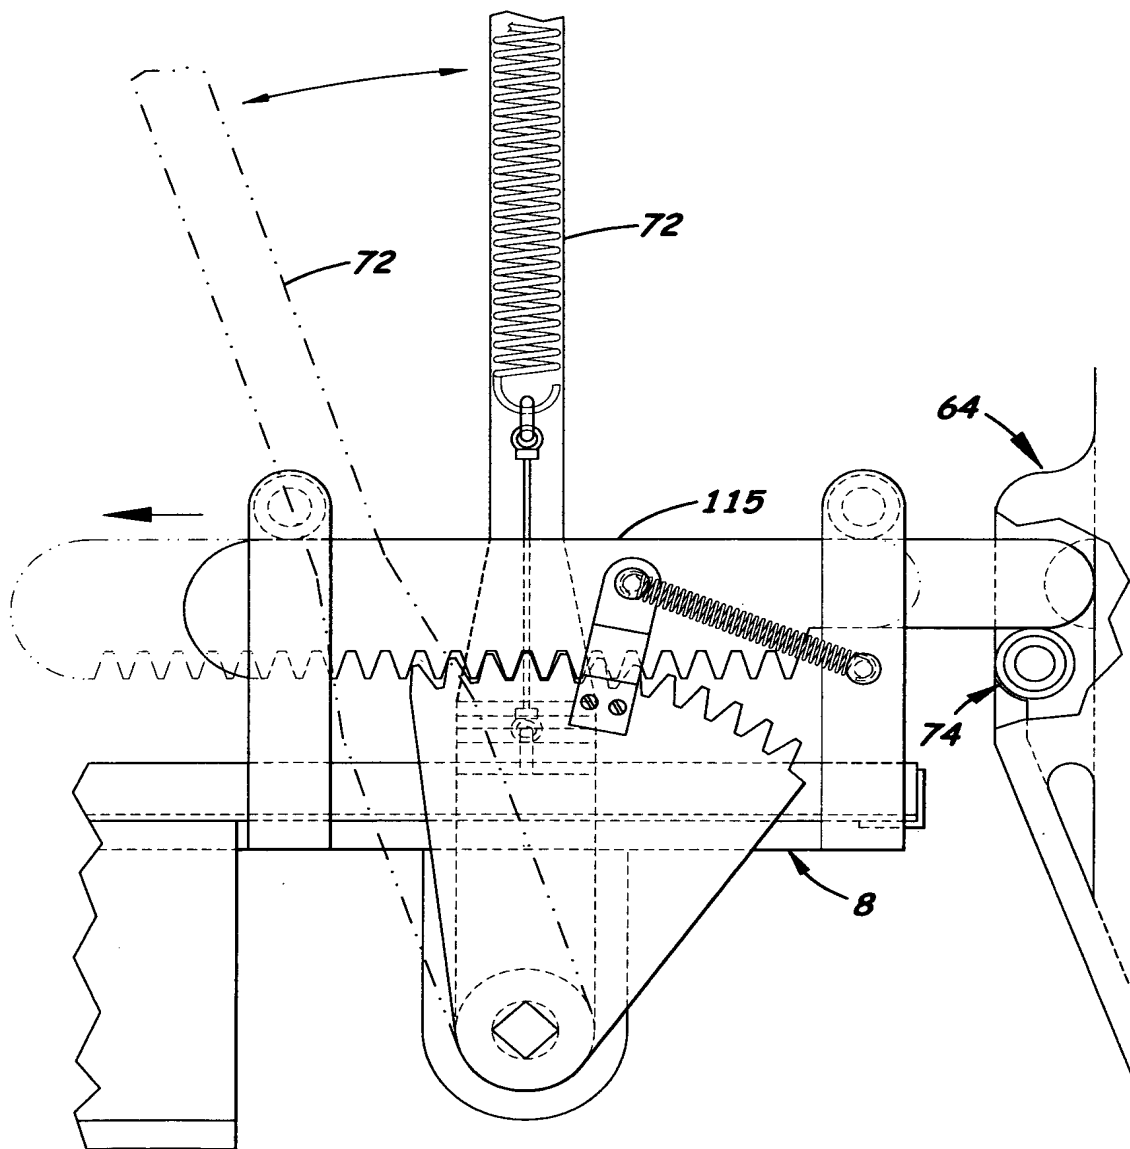


Fig. 16

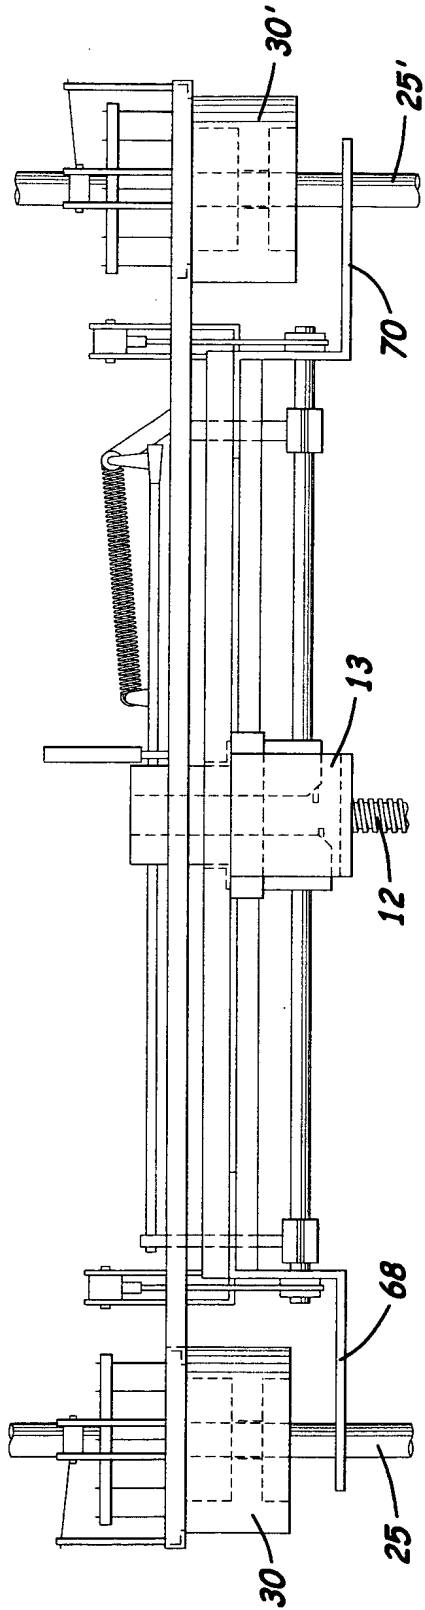


Fig. 17

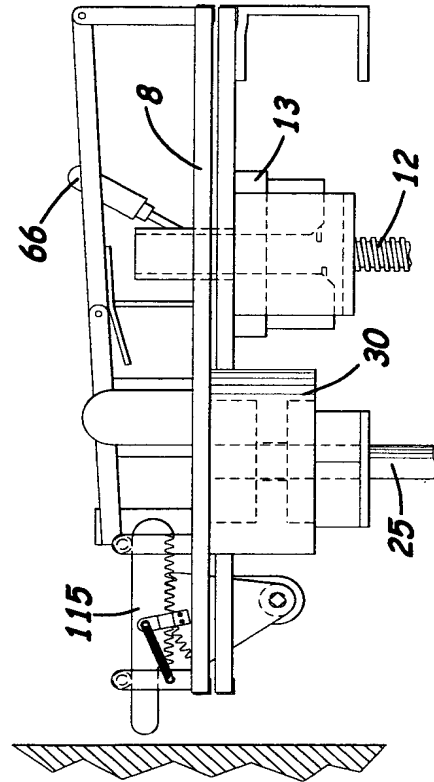


Fig. 18